



**SILENT  
KNIGHT**

by Honeywell

## Model SK5208 Basic Operating Instructions

These Instructions must be framed and displayed next to the SK-5208 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems.

Operation	Task to Perform
Test the system	Press 0 ENTER then enter a code if prompted. The system will perform a display lamp test and a communication test. Displays Firmware Revisions.
Reset Alarms	Press 1 ENTER or RESET then enter a code if prompted.
Reset the Dialer	Press 3 ENTER, then enter a code if prompted Resets the dialer and aborts the call to central station.
Display History Events	Press 5 ENTER then enter a code if prompted. Displays the panel history, which includes alarms, supervisories, troubles, reports, time and date changes, etc.
Show Status	Press 6 ENTER then enter a code if prompted. View existing system status. List Alarms first, supervisories and then troubles.
Silence Troubles or Alarms	Press 7 ENTER or SILENCE then enter a code if prompted. Silence LED will light.
Disable/Enable a Zone	1. Press Zone # + * 2. Enter Code. Repeat the process to enable the zone.
Disable/Enable NAC	1. Press 1 0 NAC # + * 2. Enter Code. Repeat the process to enable the NAC.
Conduct a Fire Drill	1. Press 2 0 ENTER then enter a code 2. Press RESET then code to end the drill.
Reset Detectors	1. Press 2 1 ENTER then enter a code. Resets all smoke detector power.
Walk Test the System	1. Press 2 2 ENTER then enter a code 2. Press RESET to end the Walk Test.
Acknowledge Events	<p>Events can be acknowledged by pressing the ENTER button. No code is required to acknowledge events. The status LEDs (Alarm, Supervisory and Trouble) will flash when an un-acknowledged alarm, supervisory, or trouble condition exists.</p> <p>After each event has been acknowledged its associated LED (Alarm, Supervisory, or Trouble LED) stop flashing and turn on steady. When viewing system status the LCD displays "Acked" for each individual event once it has been acknowledged. The control panel piezo will silence after all alarms have been acknowledged.</p> <p><b>Note:</b> The control panel piezo will continue to sound for Supervisories and Troubles even after the event has been acknowledged. Supervisories and troubles will silence once the event is restored.</p> <p>After the event is acknowledged an event is added to the event history buffer. Acknowledged events in the history buffer will be preceded with an asterisk "*".</p>

### LED Meanings

LED	Status	Condition
ALARM (red)	Off	Normal condition
	On	System in alarm.
	Flashing	LED will flash when a alarm condition exists that has not been acknowledged.
SUPERVISORY (yellow)	Off	Normal condition
	On	If a supervisory condition exist on the system.
	Flashing	LED will flash when a supervisory condition exists that has not been acknowledged.
TROUBLE (yellow)	Off	Normal condition
	On	Trouble condition exists
	Flashing	LED will flash when a trouble condition exists that has not been acknowledged.
SILENCED (yellow)	Off	Normal condition.
	On	Alarm or trouble condition has been silenced but condition still exists.
AC (green)	On	Panel is running on AC (normal condition); standby battery fully charged.
	Off	Panel has lost all power.
	Flashing	Panel is running on battery power only or AC power only.

Cut Along the Dotted Line